



# **CLEAR-COM ECLIPSE**

**BAL-16 TRANSFORMER  
GROUND ISOLATION INTERFACE**

**INSTRUCTION MANUAL**

**BAL-16 Ground Isolation Interface Instruction Manual**  
© 2008 Vitec Group Communications Ltd. All Rights Reserved.

Rev. 1

Vitec Group Communications LLC  
850 Marina Village Parkway  
Alameda, CA 94501  
U.S.A

Vitec Group Communications Ltd  
7400 Beach Drive  
IQ Cambridge  
Cambridgeshire  
United Kingdom  
CB25 9TP

Vitec Group Communications  
Room 1806, Hua Bin Building  
No. 8 Yong An Dong Li  
Jian Guo Men Wai Ave  
Chao Yang District  
Beijing, P.R. China 100022

® Clear-Com, CellCom/FreeSpeak and the Clear-Com Communications Systems logo are registered trademarks of The Vitec Group plc.

# CONTENTS

<b>OPERATION .....</b>	<b>1-1</b>
Description .....	1-1
Control, Indicators and Connectors .....	1-2
<b>INSTALLATION .....</b>	<b>2-1</b>
Installation in a Matrix.....	2-1
<b>WARRANTY.....</b>	<b>W-I</b>
Technical Support.....	W-i
Exceptions .....	W-i
Warranty Repairs .....	W-ii
Non-Warranty Repairs .....	W-ii



# IMPORTANT SAFETY INSTRUCTIONS

**For your safety, it is important to read and follow these instructions before operating a BAL-16 Ground Isolation Interface.**

*Please read and follow these instructions before operating a BAL-16 Ground Isolation Interface.*

- (1) **WARNING:** To reduce the risk of fire or electric shock, do not expose a BAL-16 Ground Isolation Interface to rain or moisture. Do not operate a BAL-16 Ground Isolation Interface near water, or place objects containing liquid on it. Do not expose a BAL-16 Ground Isolation Interface to splashing or dripping water.
- (2) For proper ventilation, make sure ventilation openings are not blocked. Install the BAL-16 according to the directions in the Installation chapter of this manual.
- (3) Do not install a BAL-16 Ground Isolation Interface near a heat source such as a radiator, heat register, stove, or other apparatus (including amplifiers) that produces heat. Do not place naked flame sources such as candles on or near a panel.
- (4) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, with one blade wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- (5) Protect the power plug from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the panel chassis.
- (6) Only use attachments/accessories specified by Clear-Com Communication Systems.
- (7) Unplug the BAL-16 Ground Isolation Interface during lightning storms or when unused for long periods of time.
- (8) Refer all servicing to qualified service personnel. Servicing is required when:
  - The BAL-16 Ground Isolation Interface has been damaged in any way, such as when a power-supply cord or plug is damaged.
  - Liquid has been spilled or objects have fallen into the BAL-16 Ground Isolation Interface chassis.
  - The BAL-16 Ground Isolation Interface has been exposed to rain or moisture.
  - The BAL-16 Ground Isolation Interface does not operate normally.

- The BAL-16 Ground Isolation Interface has been dropped.

Please familiarize yourself with the safety symbols in Figure 1. When you see these symbols on a BAL-16 Ground Isolation Interface, they warn you of the potential danger of electric shock if the station is used improperly. They also refer you to important operating and maintenance instructions in the manual.

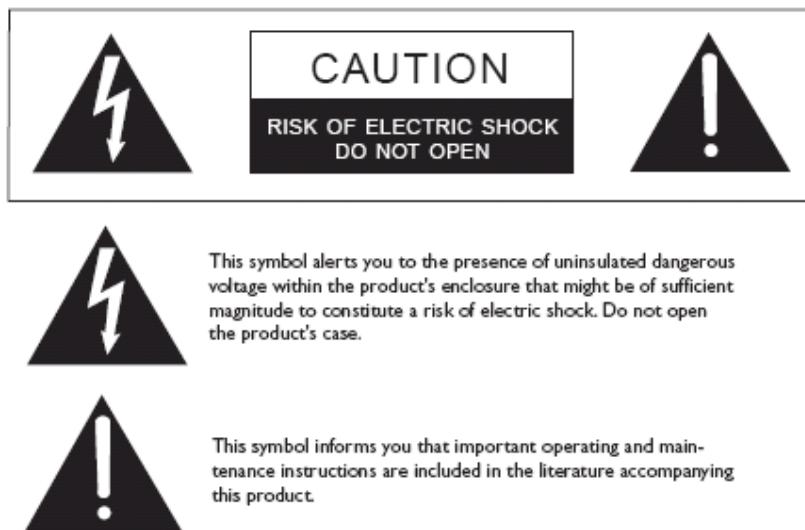


Figure 1: Safety Symbols

# OPERATION

This chapter describes the BAL-16 Interface and how to operate it.

## DESCRIPTION

The BAL-16 provides 16 channels of transformer isolation for up to 16 direct interface ports to the Eclipse matrix. The transformer isolation eliminates the hum and noise caused by ground or earth loops. Each channel handles bi-directional audio. The bi-directional audio lines are transformer isolated.

Each data pair (i.e., call/RS422 receive and send) is connected, indicating to the Eclipse status software that the port is in “direct” mode and connected (Figure 1-1).

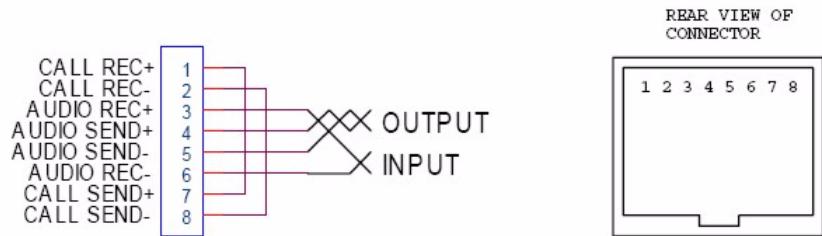


Figure 1-1: BAL-16 (equivalent schematic)

## CONTROL, INDICATORS AND CONNECTORS

The BAL-16 does not have any indicators or controls.

There are 16 RJ-45 connectors and four DB-25 (two male and two female) at the connectors at the rear panel.

 


Figure 1-2: BAL-16 Rear Panel


# 2 INSTALLATION

This chapter describes how to install the BAL-16 ground isolation interface.


## INSTALLATION IN A MATRIX

Once the BAL-16 is mounted, all connections are made between the source, the Eclipse frame, via RJ-45 patch cables, and destinations, public-address systems, radio receivers, etc., via DB-25 connectors.

### Output 1 to 8:

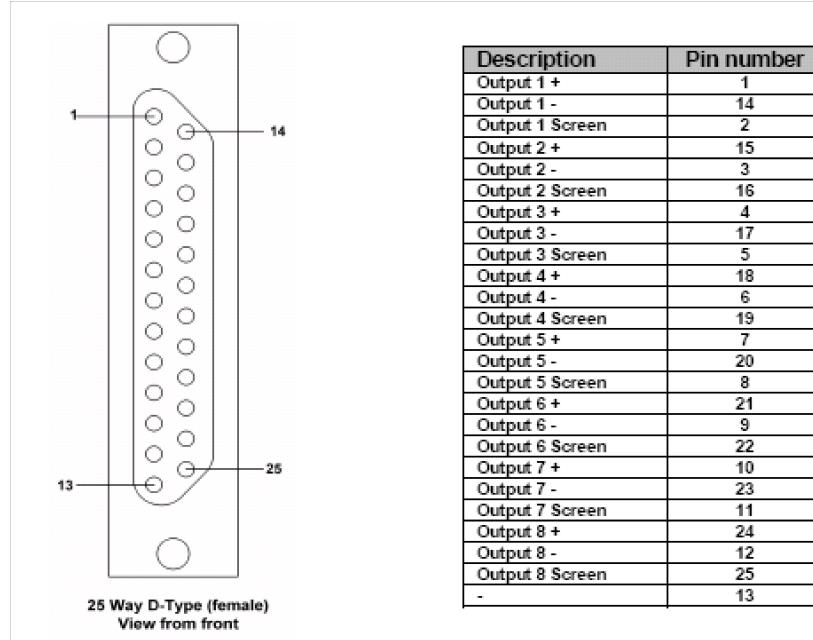


## Output 9 to 16:

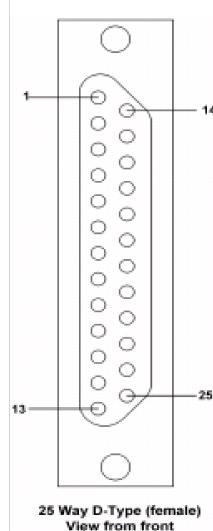


Description	Pin number
Output 9 +	1
Output 9 -	14
Output 9 Screen	2
Output 10 +	15
Output 10 -	3
Output 10 Screen	16
Output 11 +	4
Output 11 -	17
Output 11 Screen	5
Output 12 +	18
Output 12 -	6
Output 12 Screen	19
Output 13 +	7
Output 13 -	20
Output 13 Screen	8
Output 14 +	21
Output 14 -	9
Output 14 Screen	22
Output 15 +	10
Output 15 -	23
Output 15 Screen	11
Output 16 +	24
Output 16 -	12
Output 16 Screen	25
-	13

## Input 1 to 8:

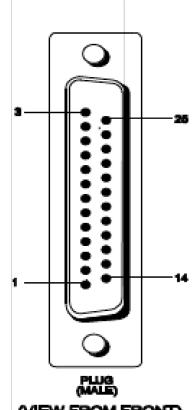

Description	Pin number
Input 1 +	1
Input 1 -	14
Input 1 Screen	2
Input 2 +	15
Input 2 -	3
Input 2 Screen	16
Input 3 +	4
Input 3 -	17
Input 3 Screen	5
Input 4 +	18
Input 4 -	6
Input 4 Screen	19
Input 5 +	7
Input 5 -	20
Input 5 Screen	8
Input 6 +	21
Input 6 -	9
Input 6 Screen	22
Input 7 +	10
Input 7 -	23
Input 7 Screen	11
Input 8 +	24
Input 8 -	12
Input 8 Screen	25
-	13

## Input 9 to 16:

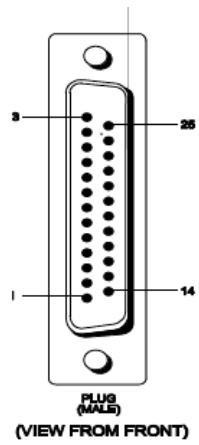

Description	Pin number
Input 9 +	1
Input 9 -	14
Input 9 Screen	2
Input 10 +	15
Input 10 -	3
Input 10 Screen	16
Input 11 +	4
Input 11 -	17
Input 11 Screen	5
Input 12 +	18
Input 12 -	6
Input 12 Screen	19
Input 13 +	7
Input 13 -	20
Input 13 Screen	8
Input 14 +	21
Input 14 -	9
Input 14 Screen	22
Input 15 +	10
Input 15 -	23
Input 15 Screen	11
Input 16 +	24
Input 16 -	12
Input 16 Screen	25
-	13



# WARRANTY

Clear-Com guarantees this product to be free of manufacturing defects in material and workmanship under normal use for a period of two years from the date of purchase.

## TECHNICAL SUPPORT

*Clear-Com offers 24/7 customer support.*

*Return authorization numbers are required for all returns.*

*Both warranty and non-warranty repairs are available.*

To ensure complete and timely support to its customers, Clear-Com maintains Technical Service Centers (TSC) staffed by qualified technical personnel. A Technical Service Center is staffed to respond to all technical inquiries and to troubleshoot technical problems regarding all products supplied by Clear-Com. A TSC is fully available to Clear-Com's customers during the full course of their warranty period.

Instructions for reaching our Technical Service Centers are given below.

### **For technical support from Europe, the Middle East, and Africa**

Call: +49 40 66 88 40 40 Monday through Friday 09:00 – 17:00 (GMT)  
+49 40 66 88 40 41 24hrs, any day (But you must have your PIN number ready.)

Web site: [www.clearcom.com](http://www.clearcom.com)

### **For technical support from the Americas and Asia**

Call: +1 510 337 6600

Web site: [www.clearcom.com](http://www.clearcom.com)

Email: [customerservicesUS@vitecgroup.com](mailto:customerservicesUS@vitecgroup.com)

FAX: +1 510 337 6699

## EXCEPTIONS

This warranty does not include damage to a product resulting from cause other than part defect and malfunction. The VGC warranty does not cover any defect, malfunction, or failure caused beyond the control of VGC, including unreasonable or negligent operation, abuse, accident, failure to follow instructions in the manual, defective or improperly associated equipment, attempts at modification and repair not approved by Clear-Com, and shipping damage. Products with their serial numbers removed or defaced are not covered by this warranty.

## **WARRANTY REPAIRS**

While Clear-Com will ensure complete system integrity by providing whatever support is necessary to resolve any failure covered under the terms of the warranty, the normal procedure will be to repair or replace any defective Line Replaceable Unit (LRU) that is returned to Clear-Com during the warranty period.

A Line Replaceable Unit (LRU) is defined as: an assembly that can be safely removed from the system and readily replaced by plugging in a new unit. In the case of ancillary items such as power supplies, the entire power supply would be returned. Whereas, in the case of circuit cards, control panels, etc., only these assemblies would be returned for repair. All equipment provided by Clear-Com is covered under the warranty.

This warranty does not include defects arising from installation (when not performed by Clear-Com), lightning, power outages and fluctuations, air conditioning failure, improper integration with non-approved components, defects or failures of customer furnished components resulting in damage to Clear-Com provided product.

## **NON-WARRANTY REPAIRS**

Equipment that is not under warranty must be sent prepaid to Clear-Com. If requested, an estimate of repair costs will be issued prior to service. Once repair is approved and completed, the equipment will be shipped freight collect from the TSC.

## **REPLACEMENT UNITS**

Should Clear-Com determine, in its reasonable discretion, that any part of a product is defective due to faulty materials or workmanship, Clear-Com shall at its expense, repair or replace such part and return the repaired/replacement part to the customer. The provisions of this warranty shall apply to the repaired/replacement part for the unexpired portion, if any, of the warranty period.

## **EMERGENCY ON-SITE ASSISTANCE**

Clear-Com can provide emergency on-site technical assistance in support of warranty activities. The level of support effort required will be decided on a case-by-case basis. Clear-Com has the qualified technical staff to support any and all emergency site activities should they occur.

## **LIABILITY**

The foregoing warranty is Clear-Com's sole and exclusive warranty. There are no other warranties (including without limitation warranties

for consumables and other supplies), or guarantees, expressed or implied (including, without limitation, any warranties of merchantability or fitness for a particular purpose), of any nature whatsoever, whether arising in contract, tort, negligence of any degree, strict liability or otherwise, with respect to the products or any part thereof delivered hereunder and/or with respect to any non-conformance or defect in any such product and/or part thereof delivered hereunder and/or with respect to any non-conformance or defect in any such product and/or part thereof delivered hereunder, or any other warranties or guarantees, including but not limited to any liability of Clear-Com for any consequential and/or incidental damages and/or losses (including loss of use, revenue, and/or profits). In any event, the maximum extent of Clear-Com's liability to customer hereunder shall not under any circumstances exceed the cost of repairing or replacing any part(s) found to be defective within the warranty period as aforesaid.

## **RETURNING EQUIPMENT FOR REPAIR**

All equipment returned for repair must be accompanied by:

- Documentation stating the return address, telephone number, date of purchase, and a description of the problem.
- A repair reference number.

To obtain a repair reference number, contact the appropriate Technical Service Center at the phone numbers or Web site listed below. Our representatives will give you instructions and addresses for returning your equipment. By talking with our representatives, many problems can be resolved on the phone.

### **For returns from Europe, the Middle East, and Africa**

Call: +49 40 66 88 40 40 Monday through Friday 09:00 – 17:00 (GMT)

+49 40 66 88 40 41 anytime, any day

(But you must have your PIN number ready)

Web site: [www.clearcom.com](http://www.clearcom.com)

### **For returns from the Americas and Asia**

Call: +1 510 337 6600

Web site: [www.clearcom.com](http://www.clearcom.com)

Email: [customerservicesUS@vitecgroup.com](mailto:customerservicesUS@vitecgroup.com)

FAX: +1 510 337 6699

