

Monitor

Apply Changes To System

Go Online (No Merge)

No Configuration

New Configuration

Apply Changes

Hardware

Cards and Ports

IP Devices

Configuration

Panels

Party Lines

Fixed Groups

Local Advanced

Controls

Sort Groups

Routes

	Talk	Listen	Description
1	TL1	TL1	Telephone Signalling
2	SPEED	BB W	SPEED DAIL BB WHITE
3	ON AI	R	PCR IP relay ON-AIR

New Delete

1) Add new Control

2) Label your control

3) Attached the relay to the control

Members

Available:

Frame relays Interface relays Panel AUX relays Panel IFB relays Panel mute relays Route: < >

Description

AUX Relay: DesktopP on Port 33
AUX Relay: LEVER IP on Port 34
AUX Relay: MTX-R on Port 2

>

<

Attached:

Interface relays Panel AUX relays Panel IFB relays Panel mute relays Routes Speed dials < >

Description

AUX Relay: PCR IP on Port 35

Properties

Basic Settings

Description PCR IP relay ON-AIR
Engineer Comments
Listen Label R
Talk Label ON AI

Global Settings

Latch Disable False

Soft Mode Options

Enable Assignment as TrueEnable Assignment as TrueProtect Port from Assi False[Find usages](#)

Description

Can be used to describe the port function