

Erik Devane

From: Erik Devane
Sent: Monday, June 5, 2017 3:13 PM
To: geoff@gerr.com
Subject: FW: Clear-Com - VoICE BIOS Settings


Subject: Clear-Com - VoICE BIOS Settings

Connect a VGA Monitor and PS/2 or USB Keyboard.


Apply Power:

Press **DEL** to enter the BIOS setup.

Choose **Standard CMOS Features**. Ensure settings are as below:

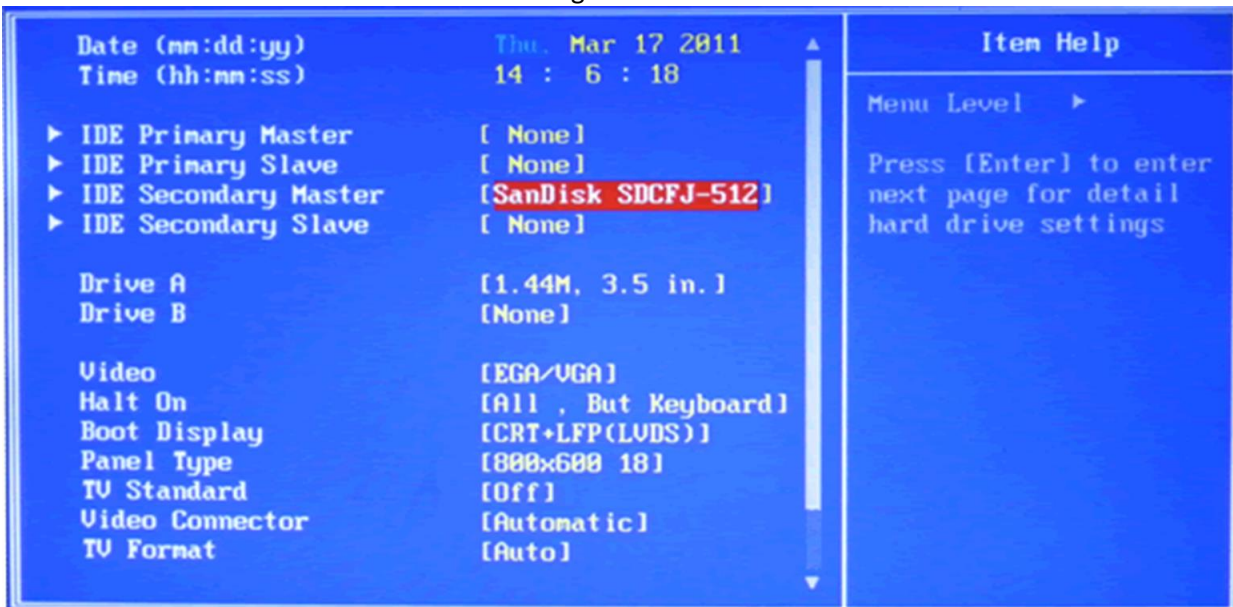


Choose **Advanced CMOS Features**. Ensure settings are as below:

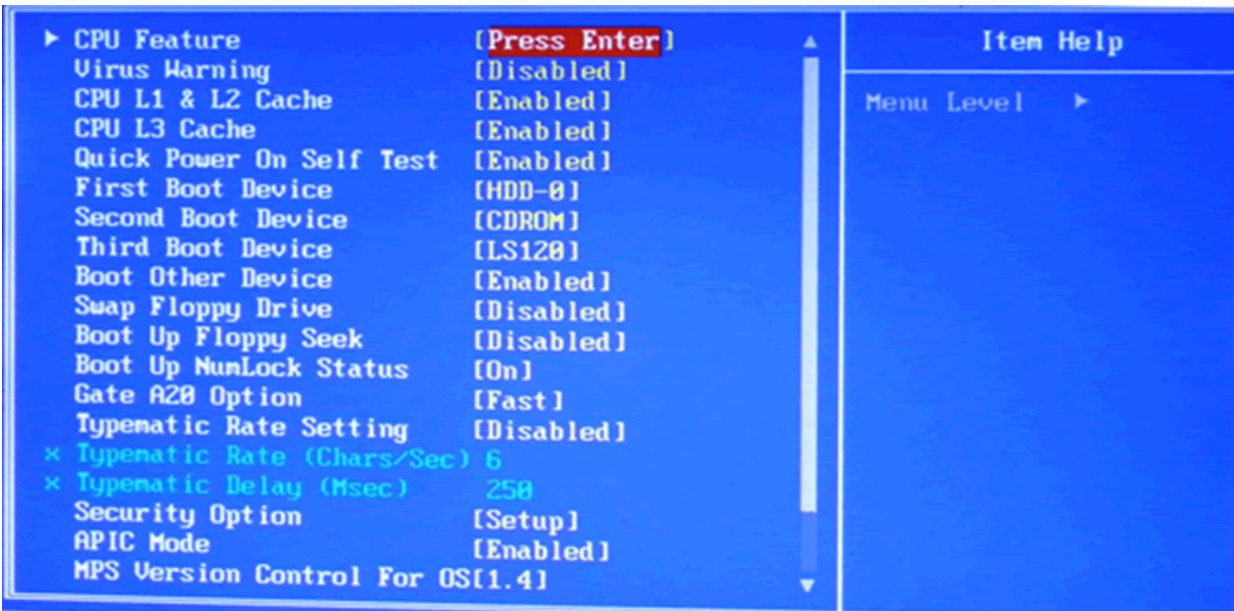


Choose **Advanced Chipset Features**. Ensure settings are as below:



Choose **Integrated Peripherals**. Ensure settings are as below:

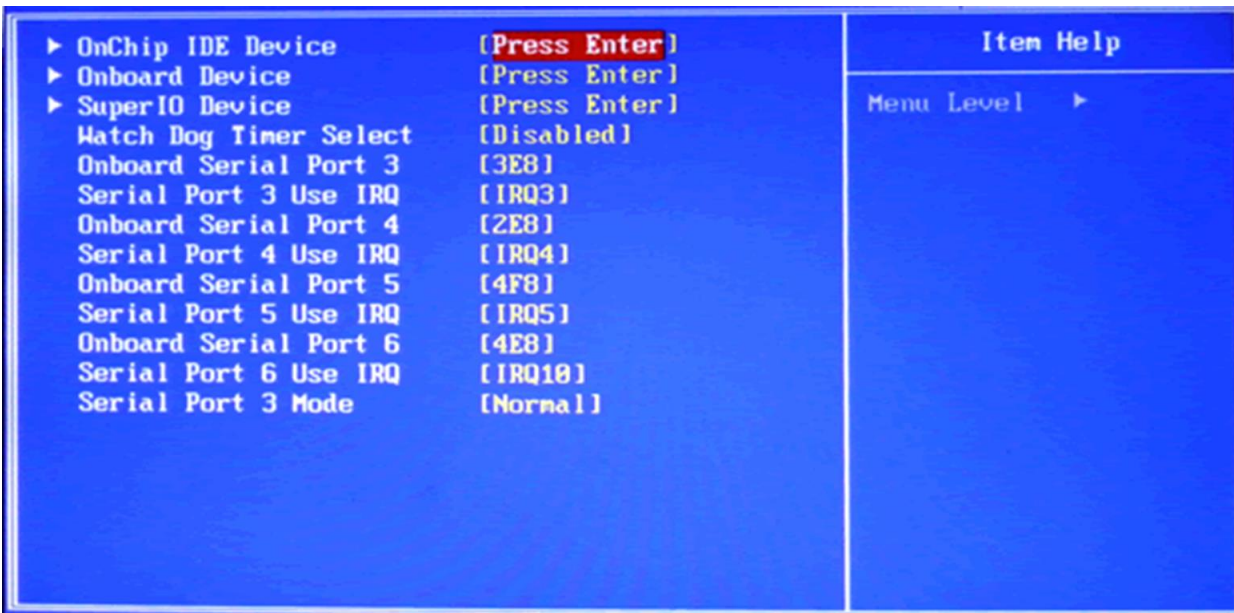

Choose **Power Management Setup**. Ensure settings are as below:

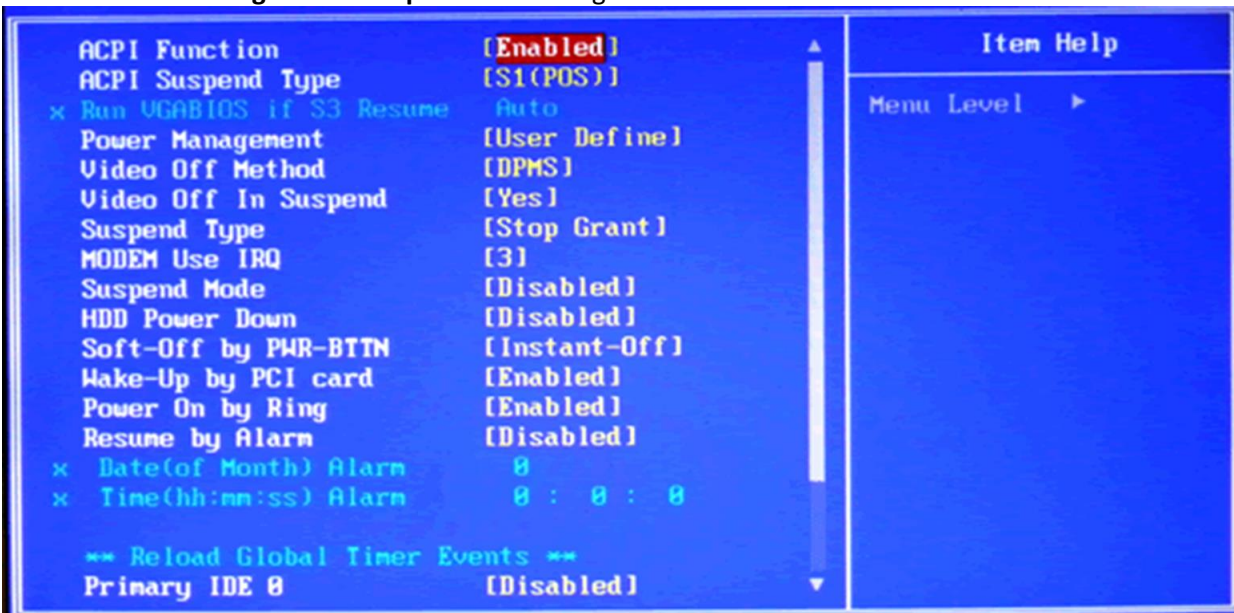

Choose **PnP / PCI Configurations**. Ensure settings are as below:

Reset Configuration Data	[Disabled]	Item Help <hr/> Menu Level ▶ Default is Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
Resources Controlled By	[Auto(ESCD)]	
× IRQ Resources	Press Enter	
PCI/UGA Palette Snoop	[Disabled]	

Check **PC Health Status** to ensure that power is good:

Case Open Warning	[Disabled]	Item Help <hr/> Menu Level ▶
CPU Temp (Bipolar sensor)	28°C	
System Temp	None	
Vcore	1.32V	
Vccp	1.84V	
+3.3 V	3.36V	
+5 V	5.84V	
+12 V	12.22V	
-12 V	-12.19 V	
-5 V	8.88 V	
CPU Fan Speed	7188 RPM	
Sys Fan1 Speed	0 RPM	
Sys Fan2 Speed	0 RPM	

SAVE AND EXIT Bios screen.

Watch the unit through the boot sequence. When completed, it should display:

VOICE login:

If this shows, try to connect to it using LAN2 on IP 10.0.0.1 using a web browser.