Eclipse HX Layout Key

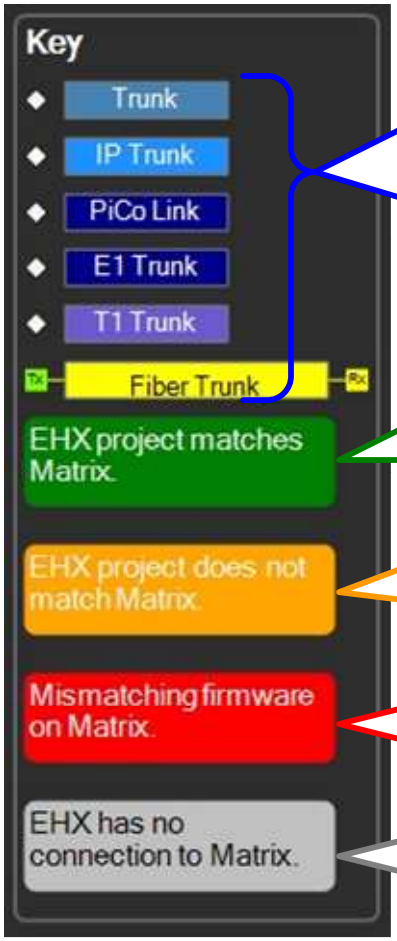

IP trunks - trunks between two IVC-32 cards in separate matrices.
Trunk - Used to allow the port to function as an intelligent trunk line to a remote matrix.
PiCo-link - only available for Eclipse HX-PiCo to Eclipse HX-PiCo connections. The PiCo-link does not support hopping.
E1 Trunk is used to connect Eclipse HX matrices using E1 trunking protocol. The System Ports display shows two ports numbered 1 and 31.
T1 Trunk is used to connect Eclipse HX matrices using T1 trunking protocol. The System Ports display shows two ports numbered 1 and 25.
Fiber trunk - install and configure E-FIB fiber cards in the matrices you want to connect. Fiber trunked matrix matrices are normally connected in a ring configuration.

Green - matrix is connected and available

Amber - the EHX configuration is not the same as the current matrix configuration.

Red - wrong firmware on matrix for current version of EHX.

Grey - matrix unavailable or already connected to EHX.