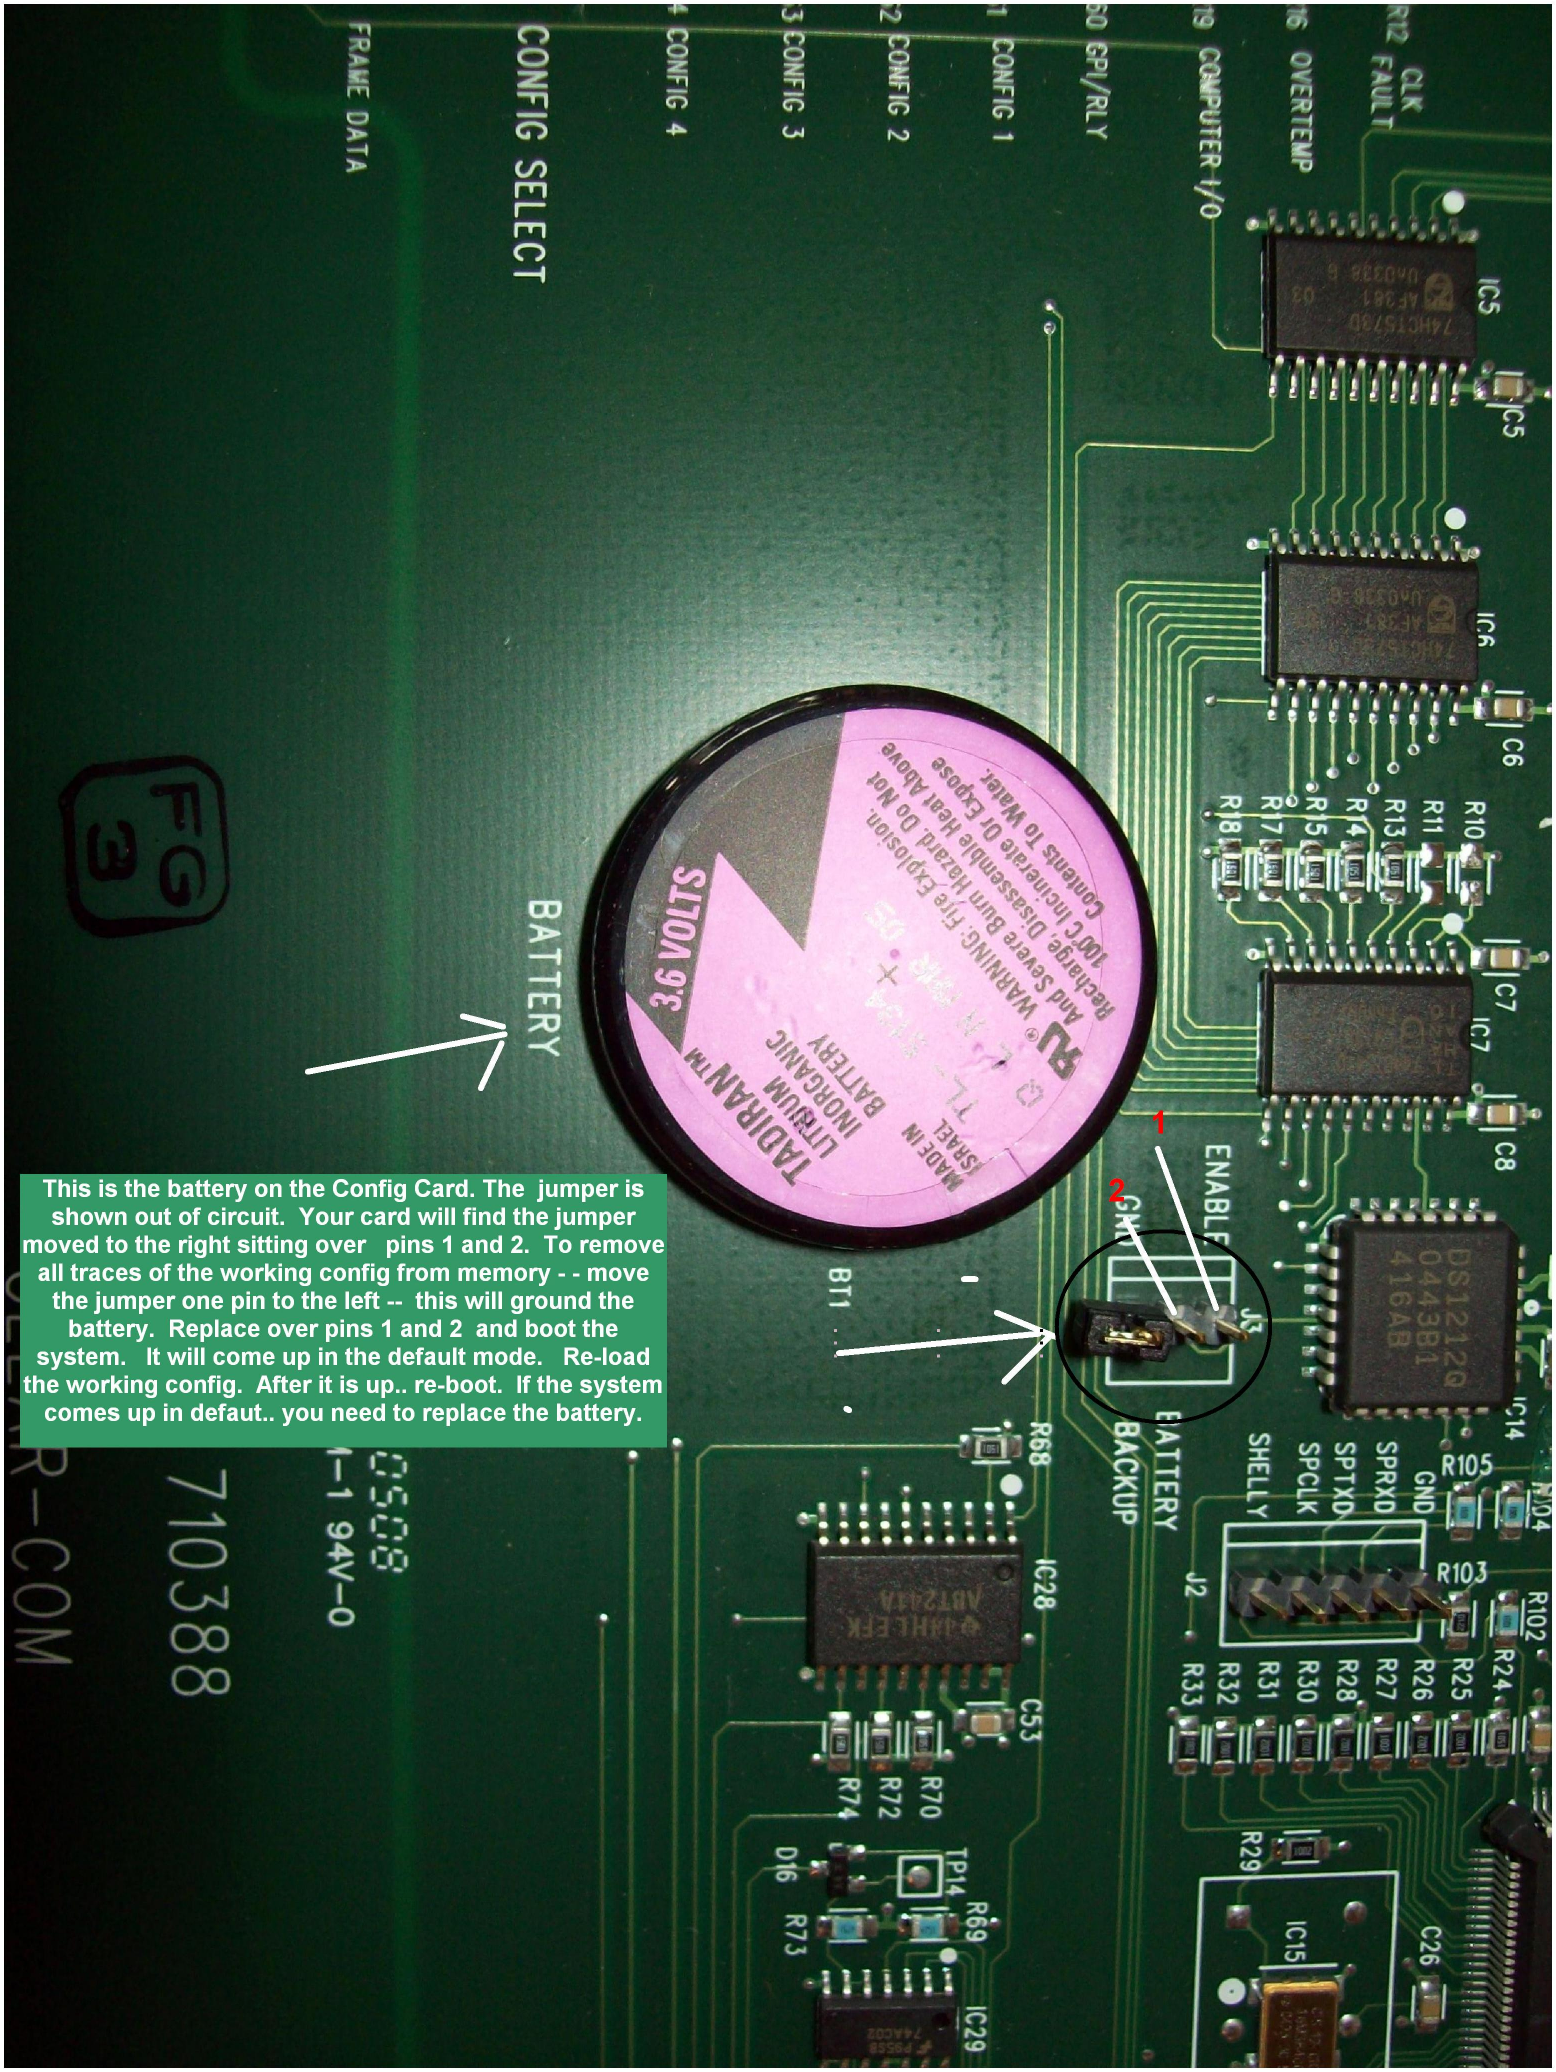

This is the battery on the Config Card. The jumper is shown out of circuit. Your card will find the jumper moved to the right sitting over pins 1 and 2. To remove all traces of the working config from memory - - move the jumper one pin to the left -- this will ground the battery. Replace over pins 1 and 2 and boot the system. It will come up in the default mode. Re-load the working config. After it is up.. re-boot. If the system comes up in defaut.. you need to replace the battery.